
Assemble using hand tools only

Portable Rotary Stand Assembly Instructions

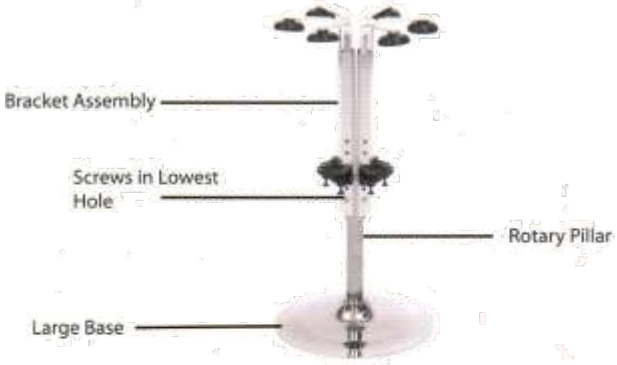

Assembly:


Take the rotary pillar in one hand and turn it upside down, pick up the large base turn it upside down and locate the centre of the base onto the bottom of the pillar, using the M8 Bolt supplied and the flat washer, screw the bolt through the base and into the pillar. A 13mm ring spanner or socket is required to tighten the bolt completely.

Next you need to fit the anti-scratch base pad supplied as follows: place the pad foam side down on a flat surface, remove the self adhesive paper and carefully lower your protable pillar stand down onto the pad being carefull to locate it centrally. Note : this cannot be removed once fitted without damage to the pad.

Take the pillar and base assembly and a bracket assembly and fix to the rotary top part of the pillar using the M5 machine screws supplied through the lowest hole available on the bracket assembly. Continue until all brackets are fitted.

Assemble using hand tools only

Wall Bar Assembly Instructions

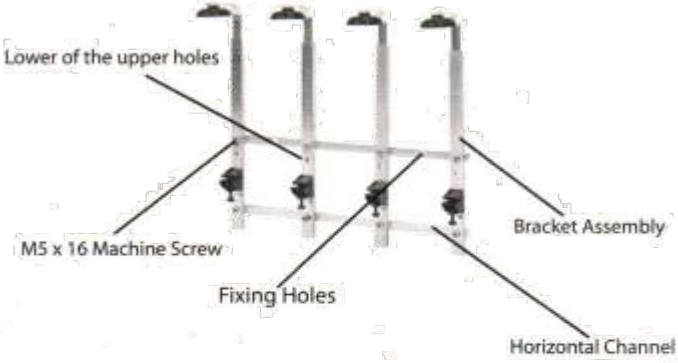

Assembly:


Fix the bracket assembly to the horizontal channel using the enclosed M5 x 16 machine screws through the upper and lower most holes in bracket assembly. NOTE: If the wall bar is going to be used on a Fixed or Portable Stand then the upper horizontal must be fixed to the lower of the upper holes in the channel assembly.

Note: on either end of the horizontal channel there is a raised notch either side of the first threaded hole, this is designed to be a "tight" fit but the bracket assembly will press in.

Continue until all brackets are fixed to the horizontal channel, check all screws for tightness. Use the fixing holes to securely fix the completed assembly to a wall. (fixings not supplied).

Assemble using hand tools only

Multi - Wall Bar Assembly Instructions

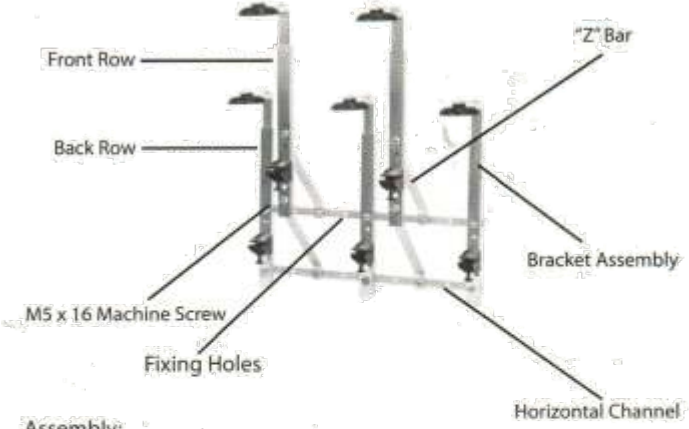

Assembly:

Fix the back row of bracket assemblies first according to the Wall Bar instructions overleaf but using every other threaded hole.


The "Z" Bar has one threaded hole and one non-threaded hole, using a machine screw in the non-threaded hole fix a "Z" Bar to the upper horizontal channel first using the available threaded hole in between the back row, then repeat fixing to the lower horizontal channel. Continue until all "Z" Bars are fitted.

Next fit the front row bracket assemblies to the "Z" Bar threaded holes using the machine screws through the same holes on the bracket assembly as you did for the back row. Check all screws are tight.

Securely fix your Multi - Wall Bar to the wall using the fixing holes. Fixings not supplied

Assemble using hand tools only

Fixed & Portable Pillar Stand Assembly Instructions

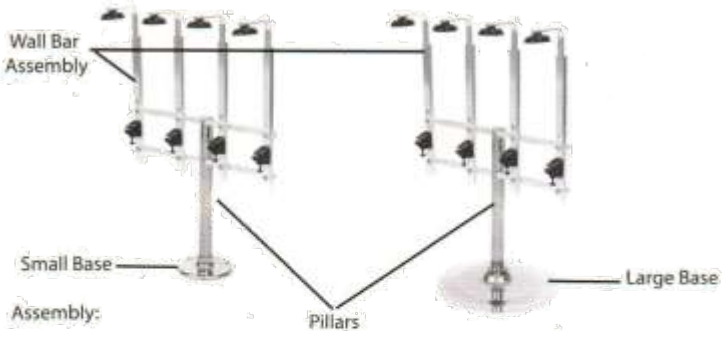

Assembly:

Assemble the brackets according to the Wall Bar Instructions but note that the horizontal channel fixes to the lower of the top holes in the bracket assembly.

Take the wall bar assembly and the fixed pillar and locate the wall bar in the two flat grooves on the fixed pillar, secure the wall bar to the pillar through the centre holes in the wall bar using the machine screws provided.

Take the pillar with the bracket assembly in one hand and turn it upside down, pick up the base (large or small according to your product) turn it upside down and locate the centre of the base onto the bottom of the pillar, using the M8 Bolt supplied and the flat washer, screw the bolt through the base and into the pillar. A 13mm ring spanner or socket is required to tighten the bolt completely.

For the fixed pillar stand, you now need to locate the stand where you would like it to be fixed and secure it using the three holes in the base. Fixings are not supplied.

For the portable pillar stand, you need to fit the anti-scratch base pad supplied as follows: place the pad foam side down on a flat surface, remove the self adhesive paper and carefully lower your protable pillar stand down onto the pad being carefull to locate it centrally. Note : this cannot be removed once fitted without damage to the pad.